Oral-B®

Stages POWER

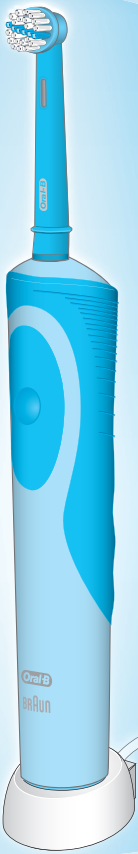

powered by BRAUN

Type 3757

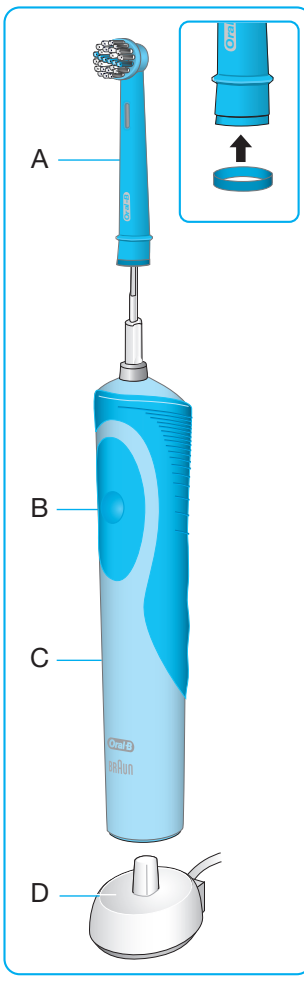
A
B
C
D
Oral-B
BRAUN

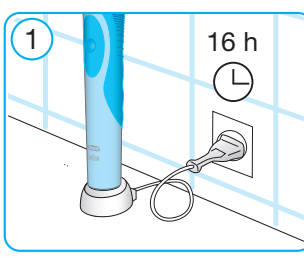
1
16 h

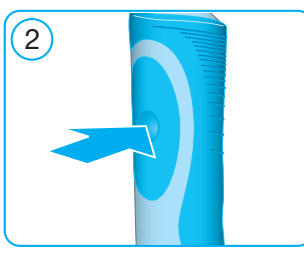
2

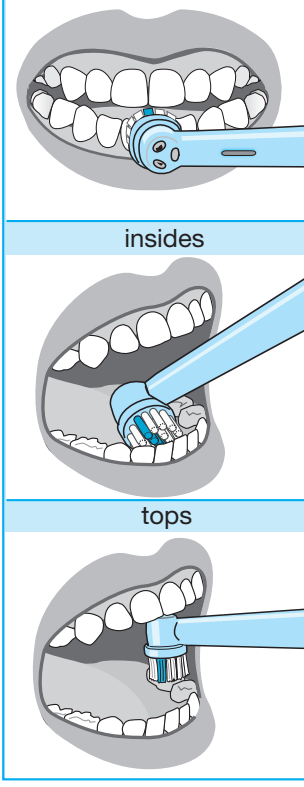
3
outsides
insides
tops

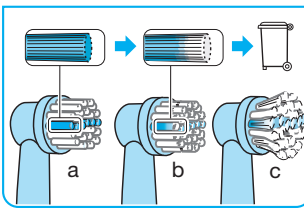
a
b
c

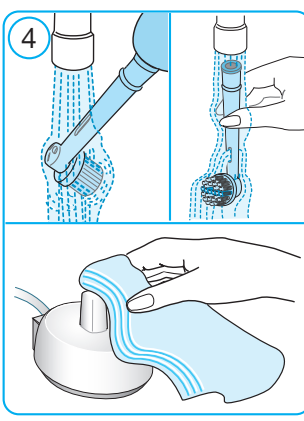
4

한국어

오랄-비의 고객이 되신 것을 환영합니다! 여러분의 자녀가 오랄-비 전동칫솔을 즐겁게 사용할 수 있기를 바랍니다.

이 전동칫솔은 3세 이상의 어린이부터 사용하길 권장합니다. 자녀에게 본 제품의 사용법을 지도하기 전 사용설명서를 주의 깊게 읽어 주십시오. 제품 사용 시작 시 자녀가 전동칫솔에 익숙해지도록 부모님의 지도를 권장합니다.

중요사항

- 정기적으로 전기코드의 손상여부를 확인하십시오. 전기코드가 손상되었을 경우, 제품을 대우 일렉 서비스 센터에 가져가십시오. 손상되거나 작동하지 않는 장치는 더 이상 사용하지 마십시오.
- 3세 이상의 어린이부터 사용하길 권장합니다.
- 육체적, 정신적, 지각 상의 장애를 겪고 있는 어린이 혹은 성인은 보호자의 지도 하에서만 본 제품을 사용하십시오.
- 어린이가 장난감으로 사용하지 않도록 지도가 필요합니다.
- 제품이 바닥에 떨어졌을 경우, 눈에 보이는 손상이 없더라도 다음 사용 이전에 칫솔모를 교체하십시오.
- 충전기를 떨어지기 쉽거나 욕조 또는 세면대에 쉽게 빠질 수 있는 장소에 보관하지 마십시오.
- 충전기를 물 또는 다른 액체에 넣지 마십시오.
- 물에 빠뜨린 충전기를 꺼내기 위해 손을 넣지 마십시오. 즉시 충전기의 코드를 빼십시오.
- 제품의 어떤 부분도 변경하거나 조작하지 마십시오. 이는 화재, 감전, 혹은 부상을 초래할 수 있습니다. 제품 수리를 위해서는 판매업자 또는 대우 일렉 서비스 센터에 문의하십시오. 제품의 배터리를 폐기하는 경우 외에는 제품을 분해하지 마십시오.
- 배터리 폐기를 위해 배터리를 꺼내는 경우, 배터리의 양극과 음극에 의한 누전이 일어나지 않도록 주의 하십시오.
- 제품의 틈새에 어떤 물체도 삽입하지 마십시오.
- 젖은 손으로 파워 플러그를 만지지 마십시오, 이는 전기 충격을 일으킬 수 있습니다.
- 플러그를 뺄 때 항상 코드 대신 파워 플러그를 잡고 하십시오.
- 제품은 이 설명서에 명시된 목적에만 사용하십시오, 제조자의 추천이 없는 부착물을 사용하지 마십시오.
- 구강 관련 질환으로 치료를 받고 있는 경우, 제품 사용 전 전문가와 상담하시기 바랍니다.

제품구성

A 칫솔모
B On/Off 작동 스위치
C 전동칫솔 핸들
D 충전부

전원 연결 및 충전

이 전동칫솔의 손잡이는 생활방수기능이 있어 전기적으로 안전하고 욕실에서 사용할 수 있도록 설계 되었습니다.

- 충전부(D)를 전원 콘센트에 꽂고 전동칫솔 핸들(C)을 충전기에 꽂으십시오 (그림 1참조). 정격전압은 충전부의 바닥에 명시되어 있습니다.
- 완전 충전에는 16시간이 소요되며 하루 2번, 2분 동안 양치질 할 경우 약 1주일간 사용 가능합니다.
- 매일 사용하시는 경우, 전동칫솔 핸들을 전원이 연결된 충전부에 놓아두시면 언제나 완전 충전된 상태에서 사용하실 수 있습니다. 과충전의 우려는 없습니다. 그러나 환경보호를 위해서는 다음 충전이 필요할 때까지 충전부 코드를 뽑아놓으시기를 권장합니다.

충전지 관리

충전지의 용량을 최대화하기 위해서, 적어도 6개월마다 한번씩 충전부의 전원을 뽑은 상태에서 정상적으로 사용하여 완전 방전을 한 후 재충전해 주십시오.

칫솔질 방법

자녀에게 다음 차례에 따라 전동칫솔의 올바른 사용 방법을 설명해 주십시오:

- 칫솔모에 소량의 치약을 묻힙니다. 불소 치약의 사용을 권장합니다.
- 입안에 칫솔모를 넣은 후 On/Off 작동 스위치(B)(그림 2 참조)를 눌러 전동칫솔 핸들의 전원을 켜십시오.
- 아랫니에서 시작하십시오. 치아에서 치아로 칫솔모를 천천히 이동하십시오. 치아를 바깥쪽, 안쪽, 씹는 면의 순서로 닦으십시오. 너무 세게 누르거나 문지르지 마십시오. 오랄-비 스테이지 파워 전동칫솔이 자동적으로 적정한 세정 작용을 제공합니다.
- 1분이 경과하면 장착된 타이머가 윗니로 이동하여 세정할 것을 짧은 진동으로 알려줍니다. 다시 다음 신호가 울릴 때까지 치아에서 치아로 칫솔모를 천천히 이동하십시오 (그림 3 참조).
- 입안에 칫솔모를 넣은 채로 On/Off 작동 스위치를 눌러 전동칫솔 핸들의 전원을 끄십시오.

INDICATOR® 칫솔모(3a)는 칫솔 교체시기를 알려줍니다. 하루 2분씩 2회의 꼼꼼한 칫솔질을 할 경우, 푸른색의 인디케이터는 약 3개월(3b) 후에 반 정도 사라집니다. 칫솔질을 할 때 어린이가 치아와 잇몸에 과도한 압력을 가하면, 칫솔 교체시기 이전에 칫솔모가 벌어집니다(3c).

교체용 칫솔모 EB10
오랄-비 판매 매장이나 대우 일렉 서비스 센터에서 구입하실 수 있습니다.

청소

칫솔질 후 전동칫솔 전원을 켠 채로 흐르는 물에 칫솔모를 깨끗이 헹구십시오. 전원을 끄고 핸들에서 칫솔모를 분리한 후 흐르는 물로 전동칫솔 핸들과 칫솔모를 별도로 세척 후 물기를 닦아 건조시켜 충전부에 다시 꽂아놓습니다. 충전부는 가끔 젖은 헝겊으로 닦아 주십시오(그림 4 참조).

이 안내 사항은 사전예고 없이 변경될 수 있습니다.

이 제품은 충전용 배터리를 포함하고 있습니다. 환경보호를 위해 이 제품을 폐기처리할 경우 생활쓰레기로 분류하지 마십시오. 폐기물은 가까운 대우 일렉 서비스센터로 가져가시거나, 환경법에 의거하여 승인된 재활용 또는 폐기장소에 버리십시오.

품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다. 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다. 본 품질보증은 오랄-비나 그 지정 판매업자에 의해 이 제품이 공급되는 모든 나라에서 유효합니다. 본 품질보증은 부적절한 사용에 의한 파손, 정상적인 마모 또는 사용, 제품 가치나 그 작동에 경미한 영향을 미치는 결함 등에는 적용되지 않습니다. 대우 일렉 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

품질 보증기간 내에 서비스를 받으려면 제품 전체와 구입시의 영수증을 대우 일렉 서비스 센터로 가져오시거나 보내주시기 바랍니다.

오랄-비 전동칫솔은 소비자 분쟁해결 기준에 따라 교환 또는 보상 받으실 수 있습니다.

애프터 서비스

대우일렉 서비스 센터 : 1588-1588
가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

오랄-비 제품 : 전국 유명 백화점 및 전자상가에서 구입할 수 있습니다.
www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
이에 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고객		판매점	

한국 피앤지 판매 (유)
서울 특별시 강남구 역삼동 679-4 16층
전화 080-920-6000(수신자부담)

English

Welcome to Oral-B! We hope your child will enjoy his/her new Oral-B toothbrush.

This appliance is suitable for children 3 years or older. Please read the usage instructions carefully before teaching your child how to use this toothbrush. We recommend that parents supervise their children when they start using the appliance to help them to become familiar with it.

IMPORTANT

- Periodically check the cord for damage. If the cord is damaged, take the charging unit to an Oral-B Braun Service Centre. A damaged or non-functioning unit should no longer be used.
- This product is not intended for use by children under age three.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are supervised by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place or store the charger where it can fall or be pulled into a tub or sink.
- Do not place the charger in water or other liquid.
- Do not reach for a charger that has fallen into water. Unplug immediately.
- Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Service Centre. Do not disassemble the product except when disposing of the battery.
- When taking out the battery for disposal, use caution not to short the positive (+) and negative (–) terminals.
- Do not insert any object into any opening of the appliance/charger.
- Do not touch the power plug with wet hands. This can cause an electric shock.
- When unplugging, always hold the power plug instead of the cord.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

Description

A Brush head
B On/off switch
C Handle
D Charging unit

Connecting and charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the charging unit (D) into an electrical outlet and place the handle (C) on there (see picture 1). For voltage specifications refer to the bottom of the charging unit.
- A full charge takes 16 hours and enables approximately one week of regular brushing (twice a day, 2 minutes).
- For everyday use, the handle can be stored on the plugged-in charging unit to maintain the toothbrush at full power; there is no risk of overcharging. However for environmental reasons, Oral-B recommends to unplug the charging unit until the next recharge is required.

Battery maintenance
To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and discharge the handle by regular use at least every 6 months.

Using the toothbrush

Please use following steps to explain to your child how to operate the toothbrush properly:

- Put a small amount of toothpaste on the brush head. (We recommend fluoride toothpaste.)
- First guide the brush head to the teeth; then turn on the handle by pressing the on/off switch (B) (see picture 2).
- Start with the lower teeth: Slowly guide the brush head from tooth to tooth; first the outsides, then the insides, finally the chewing surfaces. Do not scrub or press too hard. The Oral-B Stages Power automatically provides proper cleaning action.
- After one minute of operation, an incorporated timer signals by a short stutter to move on to the upper teeth and clean them – again tooth by tooth until the next timer signal is given (see picture 3).
- Turn off the handle by pressing the on/off switch while the brush head is still in the mouth.

The brush head is provided with a row of blue INDICATOR® bristles (3a) helping you to monitor brush head

replacement need. With proper brushing twice a day for two minutes, the colour will fade halfway in a 3-month period (3b), provided toothpaste is used. If bristles begin to splay before the colour starts to recede, this indicates that your child exerts too much pressure on teeth and gums (3c).

Replacement brush heads EB10
Available at your retailer or at an Oral-B Braun Service Centre.

Cleaning

After use, rinse the brush head under running water with the handle switched on. Then switch off and take off the brush head. Rinse both parts separately under running water. Wipe them dry before putting the handle back on the charging unit. From time to time, also clean the charging unit with a damp cloth (see picture 4).

Subject to change without notice.

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Centre or at appropriate collection points provided in your country.

Guarantee
We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Oral-B Braun Service Centre.

문의사항이 있으시면 소비자상담실로 연락주시기 바랍니다.

소비자 상담실
(KR) 080-920-6000(수신자 부담)

If you should require further assistance, please call our Consumer Service line.

Helpline
(GB) **0 800 783 7010**

Helpline
(IE) **1 800 509 448**

Internet:
www.oralb.com
www.oral-b.co.kr
www.braun.com
www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

D12.513K

99681349/X-10
Korea/GB